




Outer Stem Template

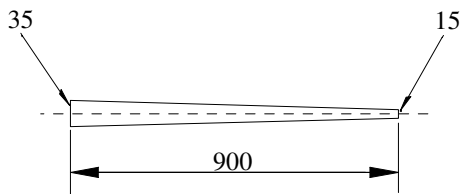

Inner Stem
half widths shown
1 in timber bevel as reqd
initially leave
inner stem overlong

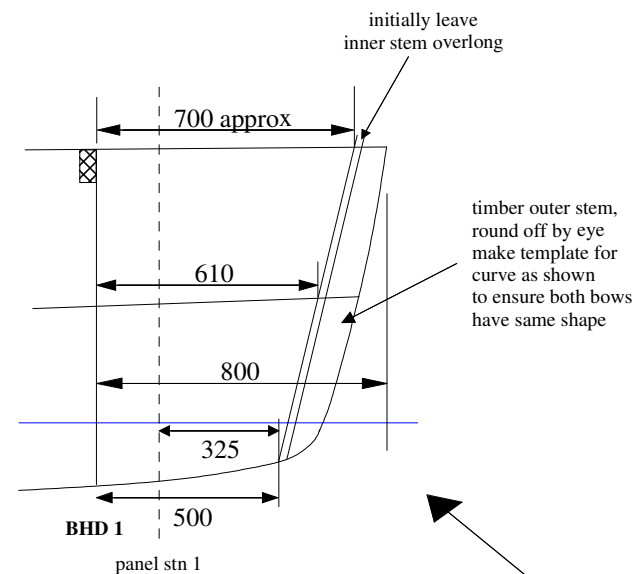

Stem
see detail

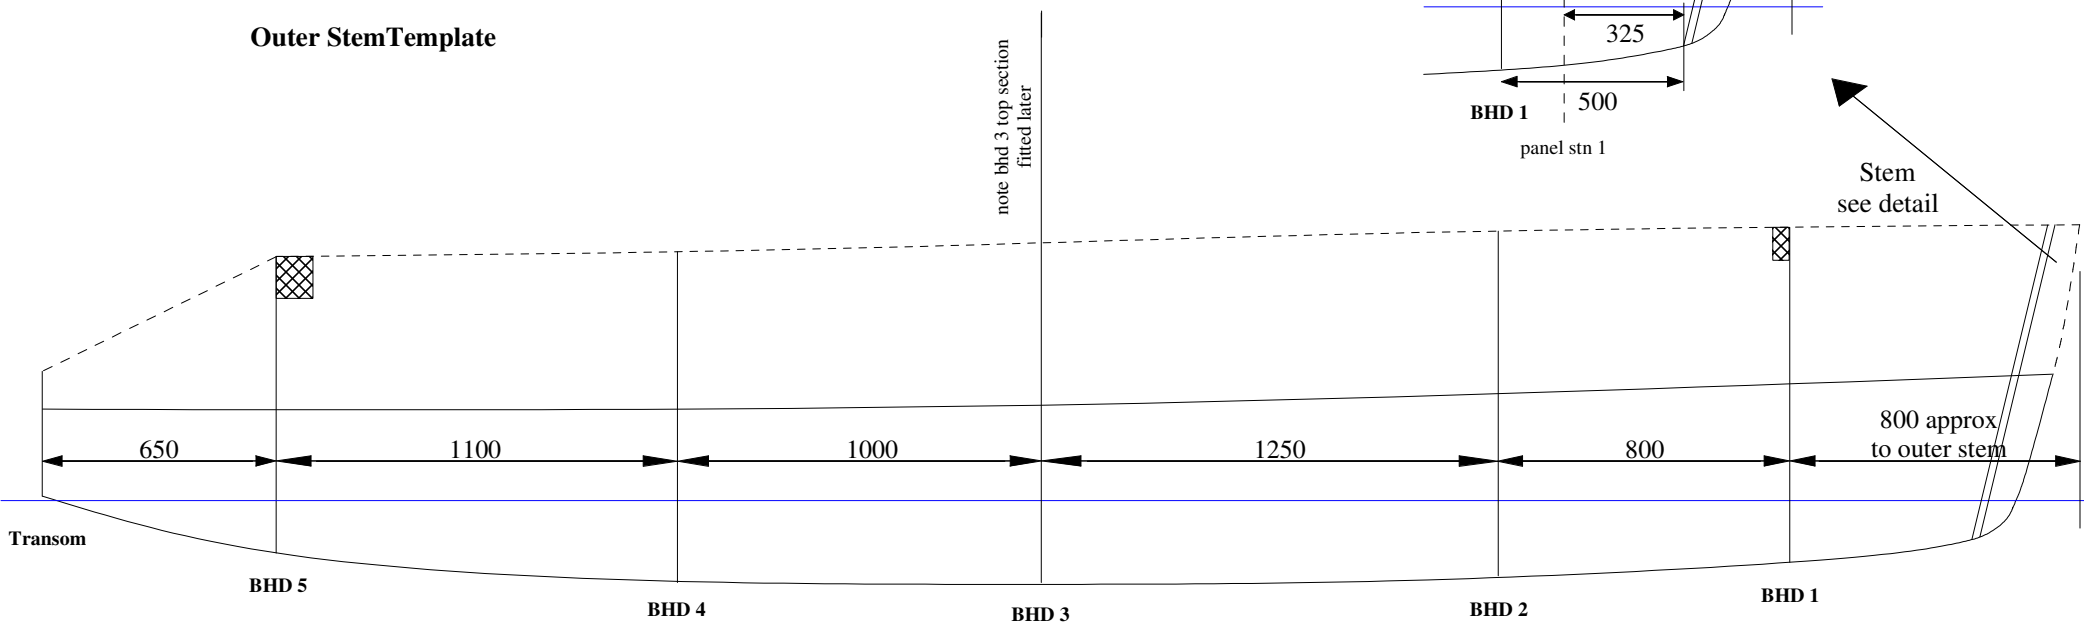

use temporary scrap timber frames at bhd positions to hold panels to correct shape while glassing bottom panels together
Measure distances from transom

Temporary Batten total widths at chine
Bhd 1 328
Bhd 2 554
Bhd 3 634
Bhd 4 630
Bhd 5 600
Transom 566

Skoota 18
5 Bulkhead Spacing
Copyright WOODS DESIGNS
May 2017