



### Hull Lower Side Panel 4 off 6mm ply

leave panels overlong at stem and transom, trim back after turning over  
Make panels from three sheets plywood.  
One starts at stem, one starts at transom. Fill in piece (approx 600 wide) near boat centreline. Butt strap, scarp or "jigsaw" joins



### Butt Strap Detail

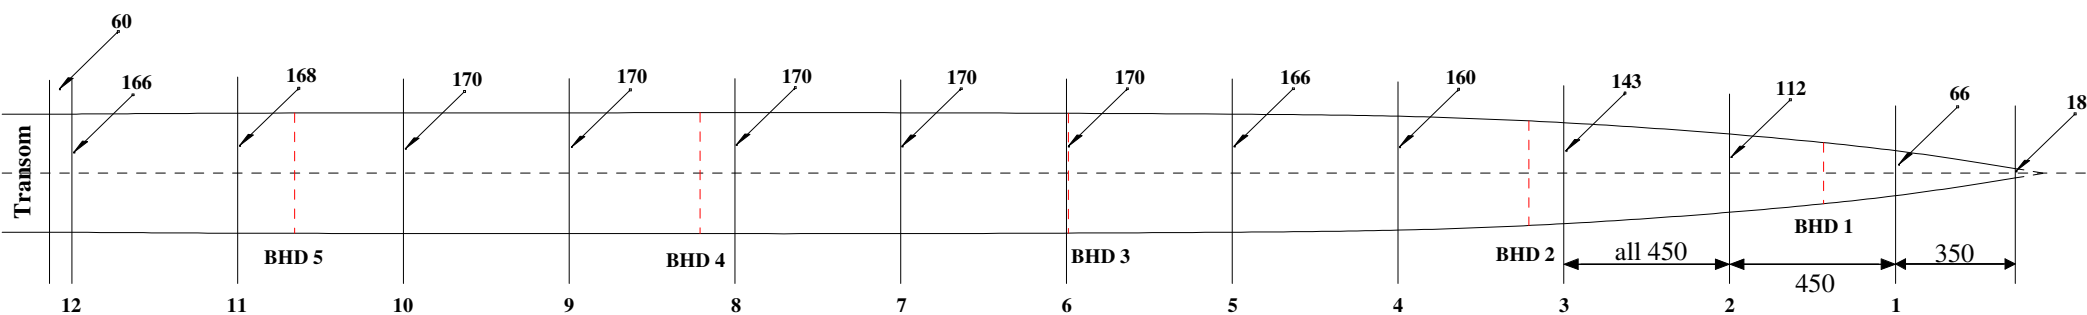

leave aft end of panel overlong  
trim back after fitting Transom

### Keel Panel 2 off 9mm ply

Widths shown are half widths  
NOTE: During assembly keel panel will be pulled up to meet hull sides.  
So keel panel is fitted under side panels. Hence it is 6mm wider than bulkheads all round  
Make panel from three sheets plywood. One starts at stem, one starts at transom. Fill in piece (approx 600 wide) near boat centreline. Butt strap, scarp or "jigsaw" joins

mark CL and bhd positions  
(dotted) on both sides keel panel  
and on side panels

leave panel overwide at stem  
to simplify fitting side panels  
trim back after turning over

Temporary Batten total widths at chine

Bhd 1 328  
Bhd 2 554  
Bhd 3 634  
Bhd 4 630  
Bhd 5 600  
Transom 566

### Skoota 18

6 Lower Panels and Keel Panel  
Copyright WOODS DESIGNS  
May 2017