



Hull Lower Side Panel 4 off 6mm ply

leave panels overlong at stem and transom, trim back after turning over
Make panels from three sheets plywood.
One starts at stem, one starts at transom. Fill in piece (approx 600 wide) near boat centreline. Butt strap, scarp or "jigsaw" joins



Butt Strap Detail

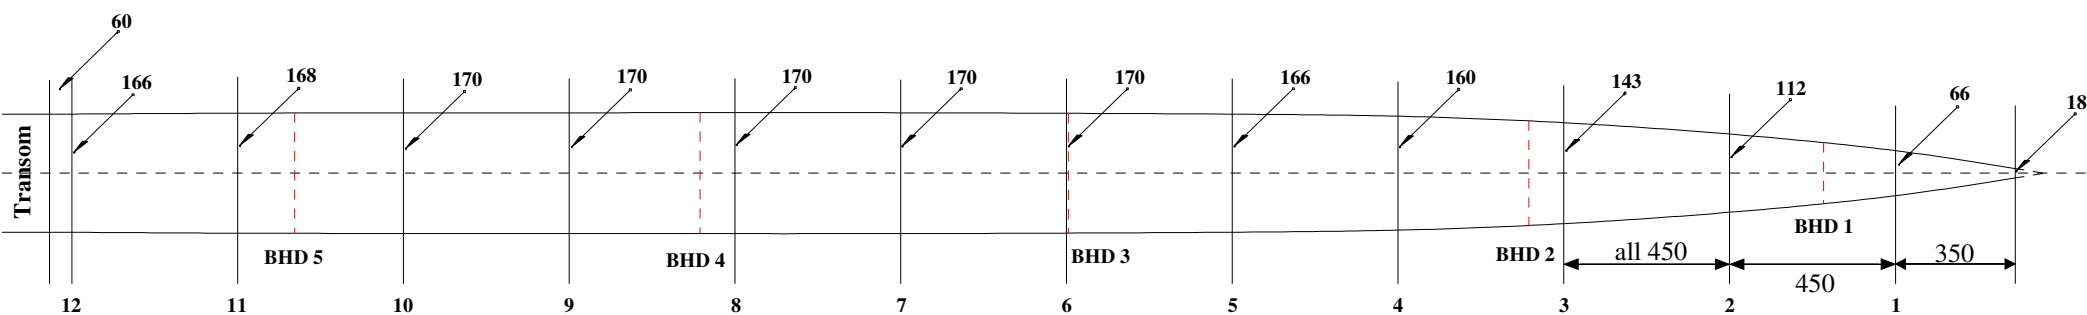

Keel Panel 2 off 9mm ply

Widths shown are half widths
NOTE: During assembly keel panel will be pulled up to meet hull sides.
So keel panel is fitted under side panels. Hence it is 6mm wider than bulkheads all round
Make panel from three sheets plywood. One starts at stem, one starts at transom. Fill in piece (approx 600 wide) near boat centreline. Butt strap, scarp or "jigsaw" joins

Temporary Batten total widths at chine

Bhd 1 328
Bhd 2 554
Bhd 3 634
Bhd 4 630
Bhd 5 600
Transom 566

Chat18

6 Lower Panels and Keel Panel
Copyright WOODS DESIGNS
May 2016