


NOTE: Boat will be delicate until it is fully assembled!!



Allow chine joints to fully cure before moving hull or turning over
Then turn the hull over, cut off the wires and round off chine as required.
Trim back the oversize bow area as reqd.
Then layup the outer chine joints as you did on the inside
Glass taping over the butt joints and round the transom is optional.

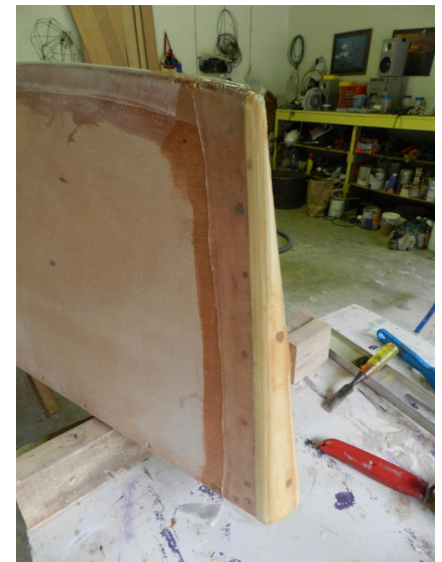

Fit solid timber outer stem
Round off as required
Note at WL stem should be almost a point,
but is flat fronted above WL or extend
to form pointed bow. Glassing optional